

sensonic

cordless laser presenter LR4

All brand names, company names and trademarks mentioned are property of their respective owners. The product specifications are subject to change without notice.
www.sensonic-global.com

Backlit LCD Menu

Always know the current status of your LR4 with an easily viewable display.

Navigation Pad

The ergonomic LR4 provides simple thumb control for easy navigation of the LCD Menu and replacing the mouse during presentations.

Countdown Timer

Set the timer to countdown from up to 24 hours to remind you of important events, or how much time is left for your presentation.

Vibrate Alarm

The vibrate lets you discretely acknowledge timed alerts without creating a distraction.

Power-saving Mode

The LR4 will automatically turn off after 30-minutes standby.

System Restore

LR4 remembers and restore the previous state of operation after switching off or even changing the batteries.

Copyright Information

Copyright © Sensonic™. All rights reserved.

Disclaimer: Sensonic™ shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

Sensonic™ reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from Sensonic™.

Preface

Congratulations on your purchase of LR4. It is a versatile presentation laser pointer, wireless USB controller, and combined flash drive.

About This User's Guide

This manual is designed to guide you through setup and operation of LR4. The introduction details quick setup and operation. The OSD chapter details how to use LR4 menu, and the final chapter explains additional functions available.

Quick Start Guide

The Quick Start Guide is designed to help you set up and operate LR4 as quickly as possible. It contains basic information to get started.

Syntax Convention

- Buttons with captions, and menu options begin with capital letters
- Buttons without captions are referenced by their graphical representation

Frequency Search

Should the receiver not respond to the controller after installing the driver

Wireless USB Receiver™ on page 7, reset the transmission and reception frequency between controller and wireless USB receiver using the following procedure.

- 1 Plug the wireless USB receiver into an available USB port.
- 2 Press the **Connect Key** on the wireless USB receiver. The Status LED will go out at the same time.
- 3 Remove the battery on the LR4.
- 4 Press the **Power button** while re-install the battery. While inserting the battery, the LCD screen lights up for three seconds after the LCD screen goes out.
- 5 Release the Power button after the LCD screen goes out. The Status LED will go out at the same time.
- 6 The wireless transmission is reset. Now the LR4 is ready to use.

Table of Contents

Introducing LR4	1	Additional Information.....	14
Features	1	Operating the Laser	14
Package Contents	3	OSD Backlight	14
LR4 Components	4	Vibrate Alert	14
Specifications	5	Frequency Search	15
Laser Pointer Icons	5		
Preparing for Use	7		
Installing the Battery	8		
Removing the Wireless USB Receiver	8		
Installing the Wireless USB Receiver	8		
LR4 Menu Display	9		
Introducing the Display	9		
On-Screen Display (OSD) Modes	10		
KEYBOARD (K/B)	10		
MOUSE	11		
MEDIA Player	11		
TIMER	12		

CHAPTER 1 Introducing LR4

This chapter details the uses, features, and installation of LR4

1.1 Features

Wireless USB Transceiver

LR4 is an all-in-one transmitter and receiver. The wireless USB receiver separates from the main controller unit and plugs directly into any USB port. The controller can transmit up to 10 meters.

Remote Keyboard and Mouse

Control the mouse or keyboard during presentations over the wireless connection.

Remote Multimedia

Use LR4 as a remote control for playing multimedia content.

Laser Pointer Icons

Project five different pointer images and enhance the appeal of your presentations.

1GB USB Flash Drive (optional)

 
LR4 wireless USB receiver is also a USB flash drive that can store up to 1GB of your data. Now you can carry all your multimedia and presentations in one convenient drive.

LR4 User Manual Chapter 1 Introducing LR4


1

1.2 Package Contents

Please check the package contains the following items.

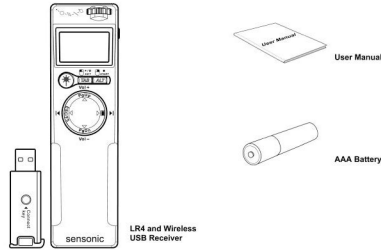

 1.3 LR4 Components

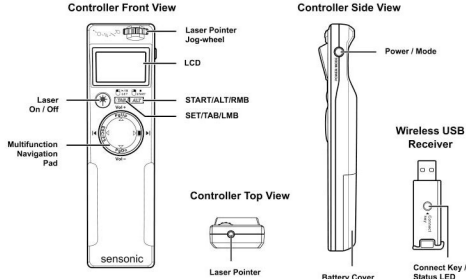

1.4 Specifications

Dimensions	13(L) x 3.5 (W) x 2.2 (T) cm
Weight	78g (including battery)
Transmission Distance	15 meter
RF Frequency	2.4G
Interface	USB 2.0
OS Supported	Windows 2000 / XP / Vista / 7 / OS Mac 9.0 & higher
Laser Wavelength	630~680nm
Output Power	CL IIIa, <5mW CL II, <1mW
Power	1x AAA 1.5V battery
Battery Burn Time	6 hours

1.4.1 Laser Pointer Icons



Warning : Laser radiation is harmful to the eyes. Do not stare directly into the beam.

Caution : Use of controls, adjustments or procedures other than those specified in this manual could result in hazardous exposure to laser radiation.



LR4 User Manual Chapter 1 Introducing LR4

3

4

LR4 User Manual Chapter 1 Introducing LR4

LR4 User Manual Chapter 1 Introducing LR4

5 6

LR4 User Manual Chapter 2 LR4 Menu Display

1.5 Preparing for Use

1.5.1 Installing the Battery

For first use, or should the battery indicator on the LCD show empty. Please use the following guidelines to install a new battery.

- 1 Push the battery cover down and away from the controller.
- 2 Align the AAA battery according to the (+) and (-) markings on the battery compartment.
- 3 Replace the battery cover sliding back until it clicks into place.



Caution:

- Only use the specified AAA battery.
- Insert battery according to (+) and (-) markings. Inserting the battery incorrectly may result in cracking or leakage, which may pose a risk of fire or lead to personal injury.
- Dispose of the battery in accordance with local laws and regulations. Please turn in your batteries at the responsible collecting point, or place of purchase.
- When the controller is not used for extended periods, please remove the battery.

Warning: Never dispose of batteries in fire, as they could explode.

 
LR4 User Manual Chapter 1 Introducing LR4

7

8


LR4 User Manual Chapter 2 LR4 Menu Display

The following example details how to edit the timer settings.

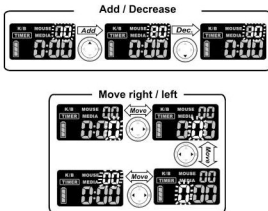

2.2.4 TIMER

 Press the **Power/Mode** button until **TIMER** is highlighted on the OSD.



Enter **TIMER** to set and start a countdown from a maximum of 24 hours using HH:MM:SS.

Press **SET** to start the timer and edit that value or press **START** to exit timer if countdown function is not needed.

Press the plus(+)/minus(-) sign to increase/decrease the highlighted number.

Press the left/right arrow to highlight the desired number to change.

 
Press **SET** to stop the timer and edit that value.

Press **START** to begin the countdown.

CHAPTER 2 LR4 Menu Display

This chapter explains how to use the OSD menus

2.1 Introducing the Display

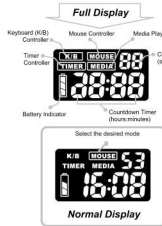

LR4 User Manual Chapter 2 LR4 Menu Display

9

2.2 On-Screen Display (OSD) Modes

LR4 has four modes of operation. Press the **Power/Mode** button to cycle through the different methods of using the controller.



2.2.1 KEYBOARD (K/B)

Press the **Power/Mode** button until **K/B** is highlighted on the OSD.



Enter **K/B** mode to replace the computer keys.

Press **ALT** and then press **TAB** to scroll through open windows and programs.

ALT, TAB, PgUp, PgDn, ESC/F5 also replace their keyboard equivalents.

The right-hand multifunction navigation pad button turns the screen blank.

2.2.2 MOUSE

Press the **Power/Mode** button until **MOUSE** is highlighted on the OSD.

Enter **MOUSE** mode to replace the computer's mouse.

ALT **ALT** replaces the right mouse button.

TAB **TAB** replaces the left mouse button.

The multifunction navigation pad moves the mouse pointer.

2.2.3 MEDIA Player

Press the **Power/Mode** button until **MEDIA** is highlighted on the OSD.



Enter **MEDIA** mode to play your media with the controller.

Remotely play, pause, stop, skip tracks or adjust the volume.

 
Vol+ Vol-

CHAPTER 3 Additional Information

This chapter details additional functions of LR4

3.1 Operating the Laser

While pressing the **Laser Pointer** button, rotate the jog-wheel and cycle through the various pointers to the desired icon.



3.2 OSD Backlight

The controller's OSD is backlit for viewing under virtually any lighting conditions, and turns on for three seconds after the following events.

- Pressing the **Power/Mode** button
- Pressing the **PgDn** (down arrow) on the multifunction navigation pad during **K/B** (keyboard) mode

3.3 Vibrate Alert

LR4 has a vibrate alert to discretely inform:

- The final three minutes of the timer; three short vibrations
- The final minute of the timer; short vibration
- When the timer reaches zero; long vibration

Note: During **Timer** mode, the backlight remains illuminated.

3.4 Frequency Search

Should the receiver not respond to the controller after installing the driver **see "Installing the Wireless USB Receiver™ on page 7**, reset the transmission and reception frequency between controller and wireless USB receiver using the following procedure.

- 1 Plug the wireless USB receiver into an available USB port.
- 2 Press the **Connect Key** on the wireless USB receiver. The **Status LED** starts flashing. If the frequency search is not complete within **1 minute**, the LED will still stop flashing.
- 3 Remove the battery on the LR4.
- 4 Press the **Power button** while re-install the battery. While inserting the battery, the LCD screen lights up for **1 second** and then go out.
- 5 Release the Power button after the LCD screen goes out. The Status LED will go out at the same time.
- 6 The wireless transmission is reset. Now the LR4 is ready to use.

sensonic

12

LR4 User Manual Chapter 2 LR4 Menu Display

LR4 User Manual Chapter 3 Additional Information

13

14

LR4 User Manual Chapter 3 Additional Information

LR4 User Manual Chapter 3 Additional Information Ver:2.0

15

All brand names, company names and trademarks mentioned are property of their respective owners. The product specifications are subject to change without notice.